



Kit Contents		
Description	Part No	Pcs
Cables ties 4,8x290		8
Cables ties 3,5x190		4
Connector		4
Pin contact		8
Heat shrink		4
Adhesive pads		6
Cancellation kit		4

👁 Note!

Please note that this image is a general representation of the product and may differ slightly from your product.

Cancellation kit PASM, Porsche 981, 991

35020-07

Mounting Instructions

MOUNTING INSTRUCTIONS

⚠ Warning!

It is advisable to have an Öhlins dealer install the cancellation kit.

⚠ Warning!

If working on a raised vehicle, ensure it is securely supported.



Preparation:

1

Cut off 150 mm / 5,9 inch of the standard damper control cable.




2

Remove 15 mm / 0,6 inch of the cable insulation and 4-5 mm / 0,16 - 0,2 inch of the wire insulation. Attach the heat shrink tube.



3

Install the supplied pin contact with a correct tool.

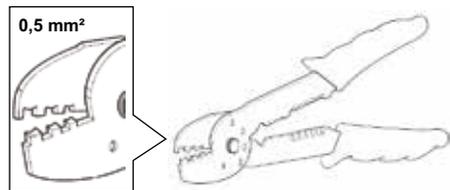

4

Insert the completed wire into the connector until to the lock. After this lock the connector and move the heat shrink tube to the middle of the connector / the wire and heat it. The pinposition / cable colour is not relevant.



MOUNTING INSTRUCTIONS

Front axle:

5

Install the cancellation kit with the supplied cable ties on the vehicle frame. The assembly position is beside the battery.


Connect the adapted cable into the cancellation kit and into the standard wire harness of the vehicle.

Insert the standard connector into the electronic component connector until it locks.

Note!

Adherend must be cleaned and degreased.

Right vehicle side

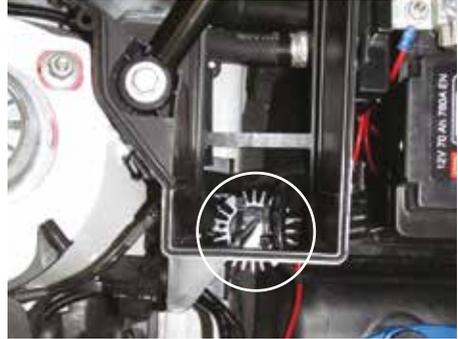

6

Install the cancellation kit with the supplied cable ties on the vehicle frame.

Connect the adapted cable into the cancellation kit and into the standard wire harness of the vehicle.

Insert the standard connector into the electronic component connector until it locks.

Note!

Adherend must be cleaned and degreased.

Left vehicle side



Rear axle: Porsche 911 type 991 C2, C4 coupé

7

Fix the supplied adhesive pads (2 parts) on the cancellation kits.



MOUNTING INSTRUCTIONS

8

Install the cancellation kit with the supplied adhesive tapes and cable ties on the vehicle frame.

Connect the adapte cable into the cancellation kit and into the standard wire harness of the vehicle.

Insert the standard connector into the electronic component connector until it locks.

Note!

Adherend must be cleaned and degreased.



9

Install the cancellation kit with the supplied adhesive tapes and cable ties on the vehicle frame.

Connect the adapte cable into the cancellation kit and into the standard wire harness of the vehicle.

Insert the standard connector into the electronic component connector until it locks.

Note!

Adherend must be cleaned and degreased.




MOUNTING INSTRUCTIONS

Rear axle: Porsche 911 type 991 C2, C4 convertible

10

Fix the supplied adhesive pads (2 parts) on the cancellation kits.

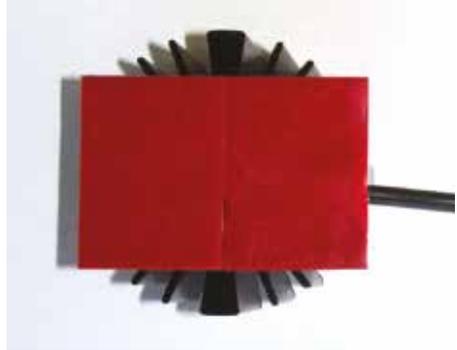

11

Assembly position.




12

Install the cancellation kit with the supplied adhesive tapes on the vehicle frame. Connect the adapte cable into the cancellation kit and into the standard wire harness of the vehicle. Insert the standard connector into the electronic component connector until it locks.

👁 Note!

Adherend must be cleaned and degreased.

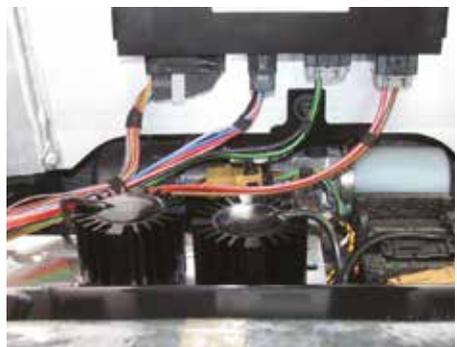

MOUNTING INSTRUCTIONS

Rear axle: Porsche Boxster type 981

13

Fix the supplied adhesive pads (2 parts) on the cancellation kits.



14

Assembly position.

Left vehicle side



15

Install the cancellation kit with the supplied adhesive tapes on the vehicle frame.

Connect the adapte cable into the cancellation kit and into the standard wire harness of the vehicle.

Insert the standard connector into the electronic component connector until it locks.

Note!

Adherend must be cleaned and degreased.



MOUNTING INSTRUCTIONS

16

Assembly position.

Right vehicle side



17

Install the cancellation kit with the supplied cable ties on the vehicle frame. Connect the adapte cable into the cancellation kit and into the standard wire harness of the vehicle. Insert the standard connector into the electronic component connector until it locks.

Note!

Adherend must be cleaned and degreased.



👁️ Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact an Öhlins distributor. Please contact Öhlins if you have any questions regarding the contents in this document.

Part no. ML_35020-07_0
Issued 2016-05-17

© Öhlins Racing AB. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Öhlins Racing AB
Box 722
S-194 27 Upplands Väsby, Sweden
Phone +46 8 590 025 00
fax +46 8 590 025 80



www.ohlins.com